PosterDisplays

A DIVISION OF ACCESS DISPLAY GROUP, INC.

TEL: 844-409-1135 FAX: 877-842-5126 E-MAIL: info@posterdisplays4sale.com

Product Sheet

Item ID # TTRIPADTLF-2228

Apple® iPAD Floor Stand Top Loading Slide-In Frame (for 22x28 Posters)

FOR CURRENT PRICING, VISIT THE ID # LISTED ABOVE

	 PLEASE SI Displays 1 of Single or Dic Top slot op Sleek Curvi Accepts up Frame profi Aluminum Available in Oval Base: Overall Pos Provides ins 	ith heavy duty extruded alloy PECIFY WHICH IPAD TYPE YOU or 2 posters 22" Wide x 28" High puble Sided Frame Options being in sign frame used for po- linear Mitered Frame with Profile S to 3/16" thick material with roo to 3/16" thick material with roo frames slide up and down the <u>7</u> Silver 10" x 14" / 7 LBS ter Stand Weight: 25 LBS stant set-up and take down within I er Stand Best suited for Indoor Us	ster insert shape adds Style m for clear overlays ind <u>2" HIGH</u> aluminum pole to yo minutes	ur desired sign height and	position	
	Anti-thef High impa Swivel & Pole Upri iPAD Orie Included	Apple® iPAD Holder Details Anti-theft hardware: Tamper Proof Screws Included High impact acrylic cover secures down your iPAD Swivel & tilts 360Ű with a lock screw to set position if desired Pole Upright Height Where iPAD Holder is Attached: 37" High iPAD Orientation: Vertical (Portrait) or Horizontal (Landscape) Included USB cable runs from the top attached to the iPAD, down the inside of the pole, and then out the bottom of the base Foam pads placed underneath the floor stand base provide enough clearance for the USB wire to exit				
COCKING TO DISPLAY A DIFFERENT TABLET BRAND, WE CAN CUSTOMIZE COCKING TO DISPLAY A DIFFERENT TABLET CALL US at FOR PRICINO. Defense Codering Options OPTIONAL Clear .020 Polycarbonate overlays are available for protection to your posters or graphics. Choose 1 Overlay for Single Sided Poster Stands Choose 2 Overlays for Double Sided Poster Stands How to Lock the iPAD Home Button The APPLE IPAD acrylic cover does have the home button exposed. For applications and environments where you wish to lock the screen or APP your displaying, you can simply disable the home button. Watch video demonstration on how to DISABLE the HOME BUTTON						
						Model TTRIPADTLF-2228